

LAN_W5500 Network Port Configuration Tool Operation Guide

1. Preparations

- 1.1 A mixer equipment
- 1.2 A PC computer
- 1.3 A wireless wifi router
- 1.3 A network cable

- 1.6 Windows system requirements
(.NET Framework 4.52 or above)

2. system connection

- 2.1 Connection mode 1 (direct connection between machine and PC)

Special reminder: This connection mode belongs to static IP setting connection
Both computer and machine network port IPs need to be in the same segment



- 2.2 Connection mode 2




LAN_W5500 Network Port Configuration Tool Operation Guide

3. Operation steps

3.1 Open the PC software and select the network card




3.2 Click Enter to enter the configuration interface

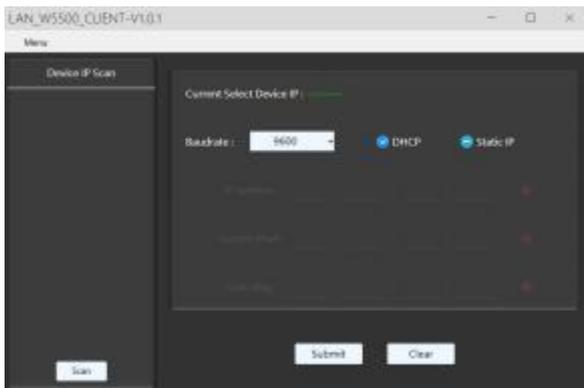

3.3 First read the instructions about IP configuration (skip this step if you are familiar with it)




3.4 Click the scan button to search and process the currently connected device

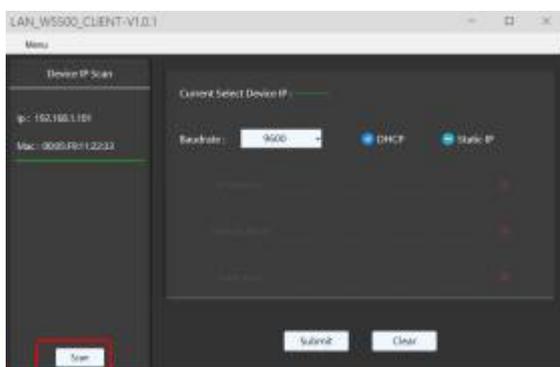

LAN_W5500 Network Port Configuration Tool Operation Guide

3.5 According to the needs, set the correct baud rate=57600, and IP static or dynamic information

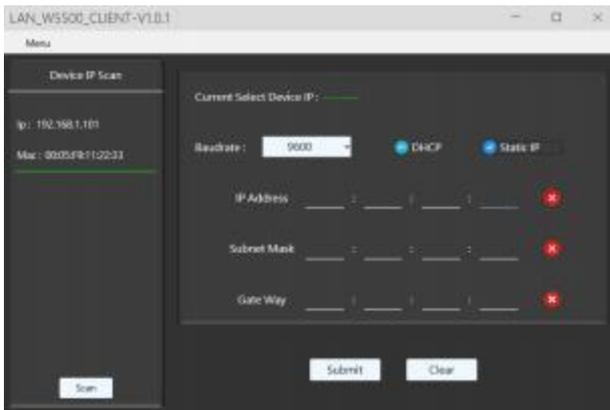

3.6 After confirming the setting information(pls check baud rate=57600), then click Submit, and a successful setting dialog box will pop up, indicating that the configuration is successful .

